

A wild boar is shown in profile, walking through a wooded area with many thin tree trunks. The boar has brown, coarse fur and a dark snout. The background is a dense forest of thin trees, creating a bokeh effect.


# TEXAS SWINE SALOON

---

SETUP INSTRUCTIONS


# PARTS INCLUDED:

1. SALOON DOOR PANEL
2. REGULAR PANEL WITH CHAIN LINK
3. REGULAR PANEL
4. NUTS/BOLTS
5. DOOR SPRING
6. DOOR TRIGGER BAR
7. STEEL CABLE

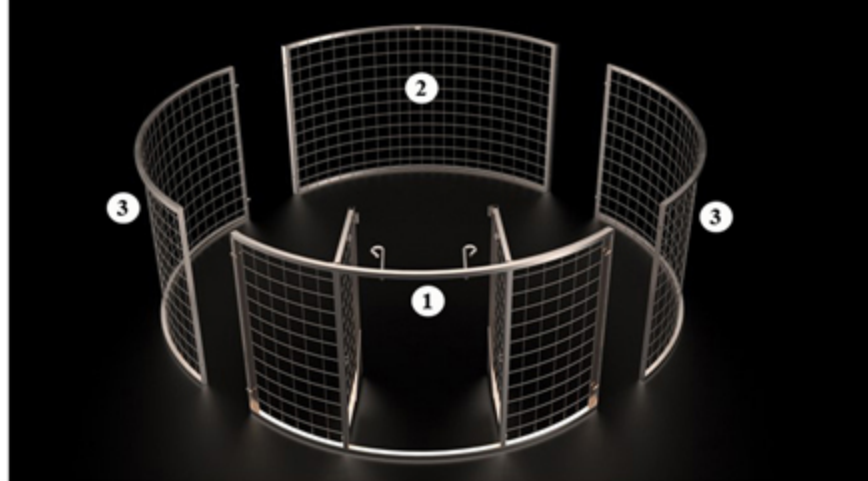

# CONNECTING PANELS


1. Once you have all four pieces standing in the correct position, begin to bolt the door panel to the two on either side first starting with the bottom bolt and then the top bolt.

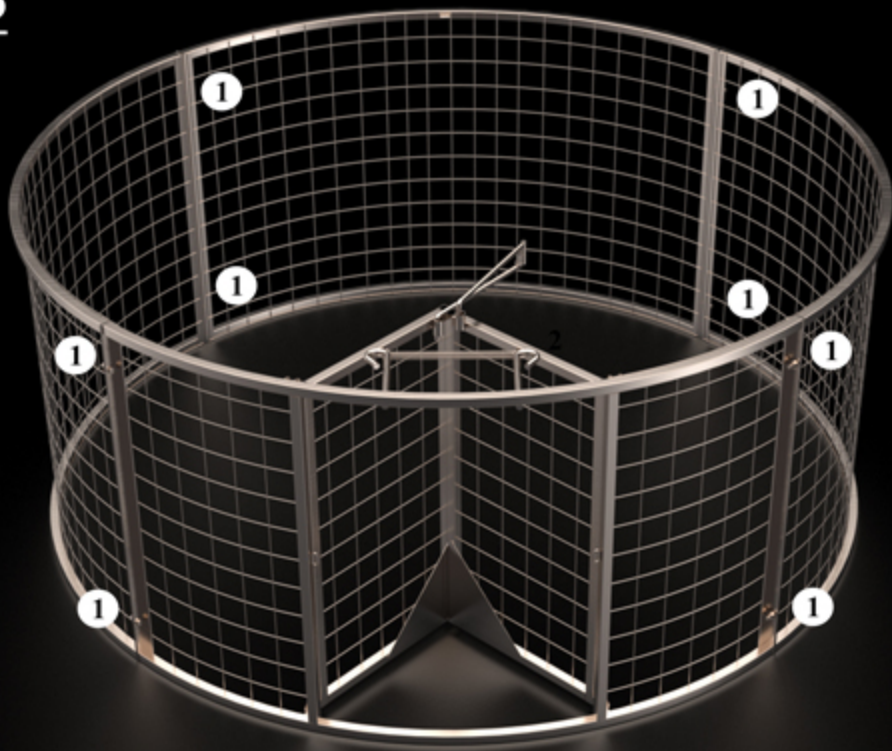

# SPRING AND RELEASE MECHANISM

1. After all panels are securely bolted together, install your spring into the two chain links one on each door across from each other.

2. Insert the trigger bar release mechanism into the pipe welded on each door with the hinge end toward the center of the trap.

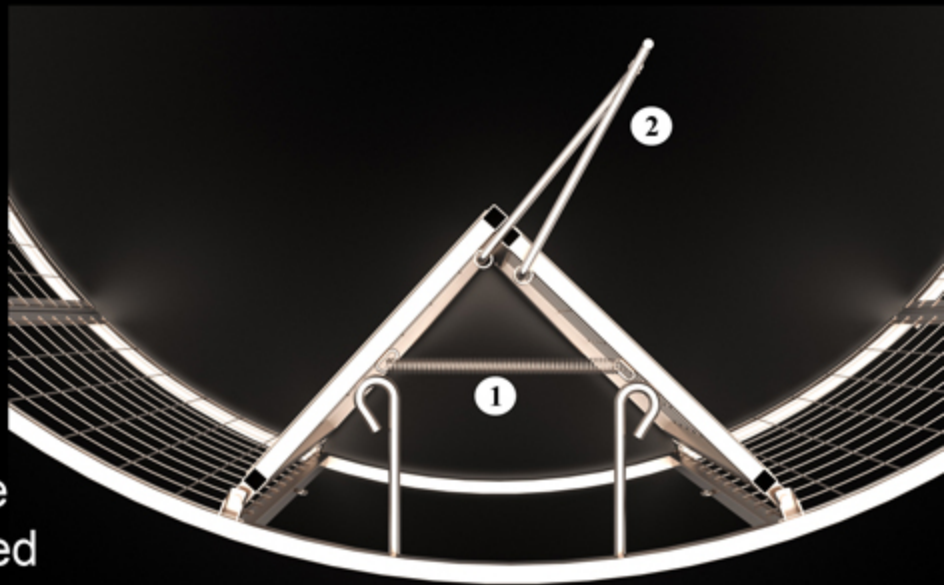

# STEEL CABLE AND CABLE CLAMPS

1. Loop and clamp only one end of the steel cable at this time. You will need to put the other end of the cable through the chain link at the back panel opposite of the saloon door before looping and clamping the other end.

2. Run cable through chain link at the back panel and loop and clamp other end of cable.






# SETTING THE TRAP

1. Add Clamp to end of cable and run the end of cable through trip hole. Loop (about 2") back through clamp and tighten clamp.



# SETTING THE TRAP

1. Once you have placed the cable loop over the vertical bar of the trigger mechanism, completely spread apart the trigger mechanism until it locks into place.

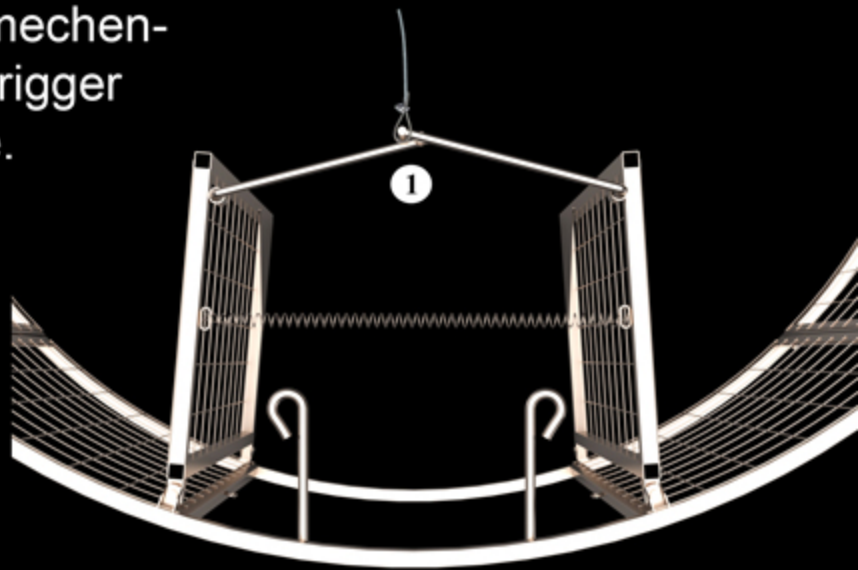

# SETTING THE TRAP

1. From the loop at the trigger vertical bar to the other end of the cable across and down thru the chain link welded on the panel leave about 2" of slack in the cable
2. Bring the cable back down to the ground about a foot off of the side and mid way of the trap. Drive a stake to anchor the end loop to the ground.

